

Ship Controlant GO



Take the Controlant GO device from the box or shelf and perform the following steps.

1


Check temperature range and calibration validity.



Check the label on top of the device for the correct preconfigured temperature range and the calibration expiry date.

2

Check shipment status.

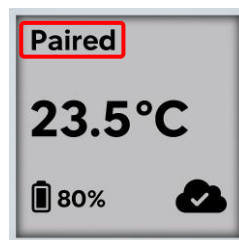


The shipment status in the top left corner of the display should show **Paired** or **Free**.

If the status is Shipping, the device has already been activated, and the temperature monitoring has started. Set the device aside and contact Controlant.

3

Check battery level.

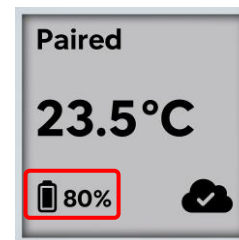


Ensure the battery level is sufficient for the duration of the shipment. The **minimum** battery for a 30-day shipment is **80%**.

If the battery level is below the desired threshold, connect the device's USB cable to a USB port until fully charged. Alternatively, select a different device for your shipment.

4

Place device with goods and press the **Start** button.

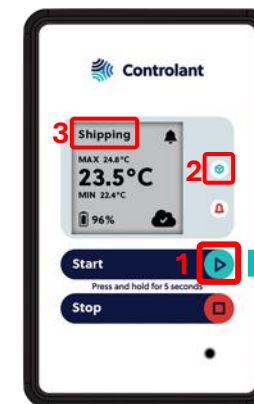

1. Press and hold the **Start** button for 5 seconds.
2. The **shipment LED** lights up for 3 seconds.
3. The status in the top left corner of the display changes from Paired or Free to **Shipping**.

Note: the alarm functionality is inactive the first 30 minutes after the button press (ignore period).



Your shipment is ready to GO!



Find our Support Center at support.controlant.com